


1. Drill

Using a hammer drill, drill hole 1/4" deeper than anchor embedment.

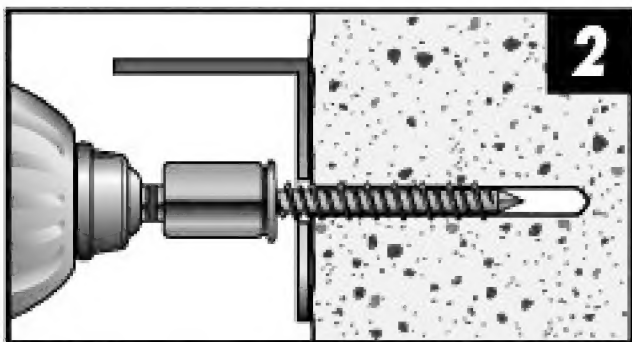

2. Drive

Position anchor into nut driver or onto Phillips bit, and drive anchor into pre-drilled hole until anchor is fully seated.